SYSTEM PLAST[®]

Instruction for disconnecting/reconnecting 2253 Roller Top Belt

Motion Control Solutions Regal Rexnord

Application Engineering: 800 626 2093

PTSAppEng@regalrexnord.com
regalrexnord.com/SYSTEMPLAST

FORM
10022E
Revised
August 2022

▲ DANGER

AWARNING

Indicates a hazard which, if not avoided, will result in serious injury or death.

Indicates a hazard which, if not avoided, could result

▲ CAUTION

Indicates a hazard which, if not avoided, could result in minor or moderate personal injury.

NOTICE

Indicates information considered important, but not hazard-related (e.g. messages relating to property damage).

GENERAL SAFETY INSTRUCTIONS

in serious injury or death.

A WARNING

- · Read and follow all instructions carefully.
- Disconnect and lock out power before installation and maintenance.
 Working on or near energized equipment can result in severe injury.
- Do not operate equipment without guards in place. Exposed equipment can result in severe injury or death.
- Read and understand the information in this section and in this manual completely before installing, operating or maintaining this equipment. Failure to follow this instruction could result in severe injury or death.

A CAUTION


 Perform periodic inspections. Equipment may fail prematurely and could become unsafe if not properly inspected and maintained.
 Failure to follow this instruction could result in mild or moderate personal injury.

Disconnecting and Reconnecting of the Belt

Follow the procedure below to disconnect and /or reconnect the belt when installing the conveyor or doing maintenance.

1) Procedure for disconnecting and reconnecting

Open the clip with a screwdriver by rotating about 90 degrees.

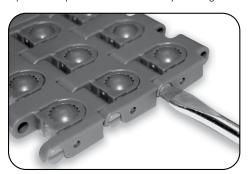



2) Procedure for changing the balls or the retainers.

